 



### AquaLink® Wireless Handheld Remote Replacement Parts

Replaces both PDA Handheld and AquaPalm™ Handheld

Key No.	Part No.	Description
1	R0686300	PDA/Aqua Palm J-Box Assembly (18-Channel RF), R Kit
	R0441900	PDA/Aqua Palm J-Box Assembly (10-Channel), R Kit
2	R0443300	Gasket/Screws (2), J-Box
	R0687300	AquaLink Wireless Handheld Remote (18-Channel), R Kit
3	R0444300	AquaLink Wireless Handheld Remote (10-Channel), R Kit
	R0443400	Black Battery Door/Seal/Screws (2), Handheld
4	R0578200	Blue Battery Door/Seal/Screws (2), Handheld

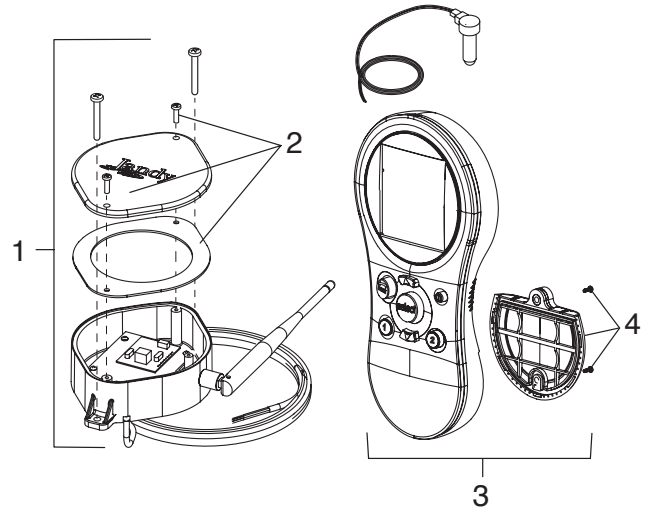
 
### Rechargeable Wireless OneTouch™

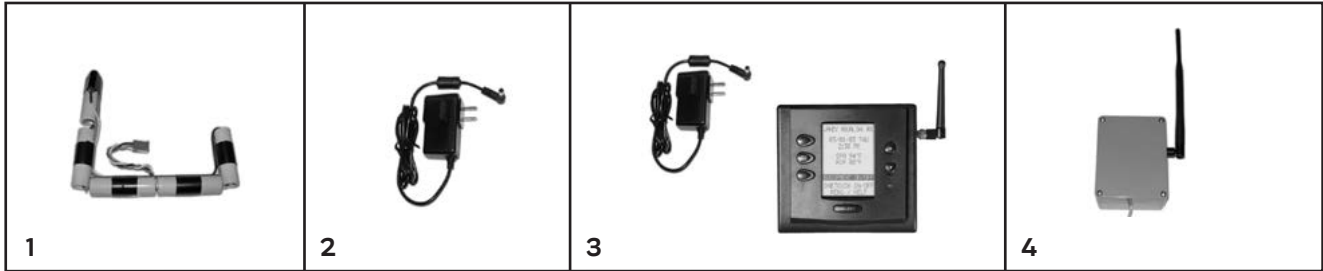

Key No.	Part No.	Description
1	R0560000	Battery Pack
2	R0560200	Wireless Power Supply Charger Kit
3	8227	Additional Portable Wireless Control Panel [with recharging circuitry and OneTouch PCB]
4	8241	Wireless Outdoor J-box Kit